

TANDBERG Remote Control TRC5

Function keys: Represents shortcuts and advanced functions. Each key reflects a soft key on screen.



Microphone: Press the key to toggle the microphones on/off.

Volume: Press the + or - on the key to adjust the codec volume.

OK/Select: Press the key to confirm your choice or selection.

Phone book: Press the key to display the local Phone book.

Home: Press the key to show the menu on screen.

Call: Using the key:
INITIATE A CALL: Select a name from the Phone book or enter the name, number or URI and press the Call key to initiate the call.
SHORTCUT TO RECENT CALLS: Use the Call key as a shortcut to Recent Calls when the Call menu is not visible.

Clear: Press the key to remove characters in a text field.

Waking up the system
 Grab the remote control and make sure your hand touches the rubber line sensors going along both sides of the remote control.
 or: Touch any key on the remote control.

Presentation: Press the key to show/hide a presentation.

Zoom: Press the + or - on the key to zoom the camera in and out.

- Arrows:**
- **Up/Down:** Use the and arrow keys to navigate in the menu.
 - **Arrow Right:** Press the arrow key to expand the selected menu item or to move to the right in a text field.
 - **Arrow Left:** Press the arrow key to go one step back in the menu or to move to the left in a text field.

Layout: Press the key to display the Layout menu, then select a view in the menu.

End call/Standby: Press the key to end a call, or when idle, press and hold the key to go into standby mode.

- Alphanumeric keypad:** Use the keypad in the same way as you would use a cellular phone.
- **0-9, a-z, period (.), @, space, *:** Press a key repeatedly to toggle between the options displayed on each key.
 - **abc/123 #:** Press the # key to toggle between touch tones mode (long press), lower case characters and numbers.

- IR transmitter range (DIP switch setting)**
 The IR transmitter has a short and long range. Open the battery cover and remove the batteries to set the DIP switch.
- **Short range (1 m):** Move the DIP switch down.
 - **Longer range:** Move the DIP switch up.